


Dealer: MEDIX	Approved By:	Date:	Customer: NORTHWEST AMBULANCE	16-90183	Sheet A
----------------------	---------------------	--------------	--------------------------------------	----------	-------------------


ALL COMPARTMENT & ENTRY DOORS TO HAVE POWER LOCKS, WIRE TO OEM
 ALL WARNING, SCENE, AND TAIL LIGHTS TO HAVE CHROME BEZELS
 ALL GREEN DIMENSIONS ARE TAKEN FROM EDGE OF WALL
 SURFACE PRIOR TO CORNER CAP BEING APPLIED

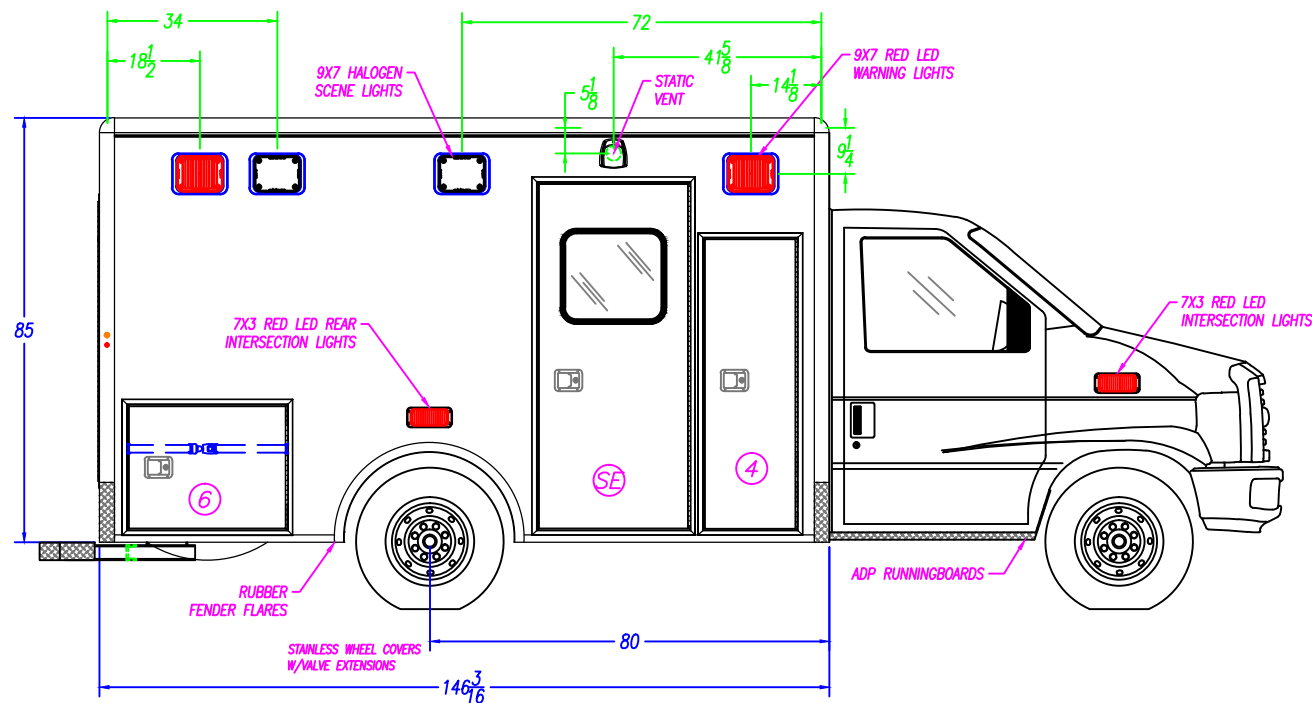


COMPARTMENT SIZES		NOTE: THE DIMENSIONS BELOW ARE OVERALL INTERIOR SIZES FOR EACH SPECIFIED COMPARTMENT TUB			COMPARTMENT & ENTRY DOORS				COMPARTMENT TUBS			
NO.	COMPARTMENT TYPE	WIDTH	HEIGHT	DEPTH	NO.	PART NUMBER	NO.	PARTNUMBER	NO.	PART NUMBER	NO.	PARTNUMBER
4	ALS/BATTERY COMPARTMENT	19 3/8"	15 1/2"	21"	4	71-101348	-	---	4	41-101372	-	---
-	---	---	---	---	-	---	-	---	-	---	-	---
-	---	---	---	---	SE	71-101286	-	---	-	---	-	---
					FORD E-350 138" W.B. 146" RP90-ES TYPE III				 3008 MOBILE DRIVE ELKHART, IN 46514 PH: 574-266-0911 FAX: 574-266-6669 "LET US SHOW YOU THE MEDIX DIFFERENCE" WWW.MEDIXAMBULANCE.COM			
COMPARTMENT / ENTRY DOOR SIZES					DESCRIPTION: CURB SIDE EXTERIOR							
NO.	COMPARTMENT / ENTRY DOOR TYPE	WIDTH	HEIGHT	DRAWN BY:		DATE CREATED:		SCALE:				
4	ALS/BATTERY COMPARTMENT DOOR	18"	58 1/8"	J.ARTLEY		11/23/16		5/16"=1'				
-	---	---	---	REVISED BY:		DATE REVISED:		REVISION:				
SE	SIDE ENTRY DOOR	29 3/4"	69 1/8"	D.EDWARDS		3/23/17		D				
-	---	---	---	Note: Drawings are for reference only, measurements may vary from actual product.								

MEDIX 3008 MOBILE DRIVE
 ELKHART, IN 46514
 PH: 574-266-0911
 FAX: 574-266-6669
 SPECIALTY VEHICLES, INC.
 "LET US SHOW YOU THE MEDIX DIFFERENCE"
 WWW.MEDIXAMBULANCE.COM

ALL COMPARTMENT & ENTRY DOORS TO HAVE POWER LOCKS, WIRE TO OEM
 ALL WARNING, SCENE, AND TAIL LIGHTS TO HAVE CHROME BEZELS
 ALL GREEN DIMENSIONS ARE TAKEN FROM EDGE OF WALL
 SURFACE PRIOR TO CORNER CAP BEING APPLIED

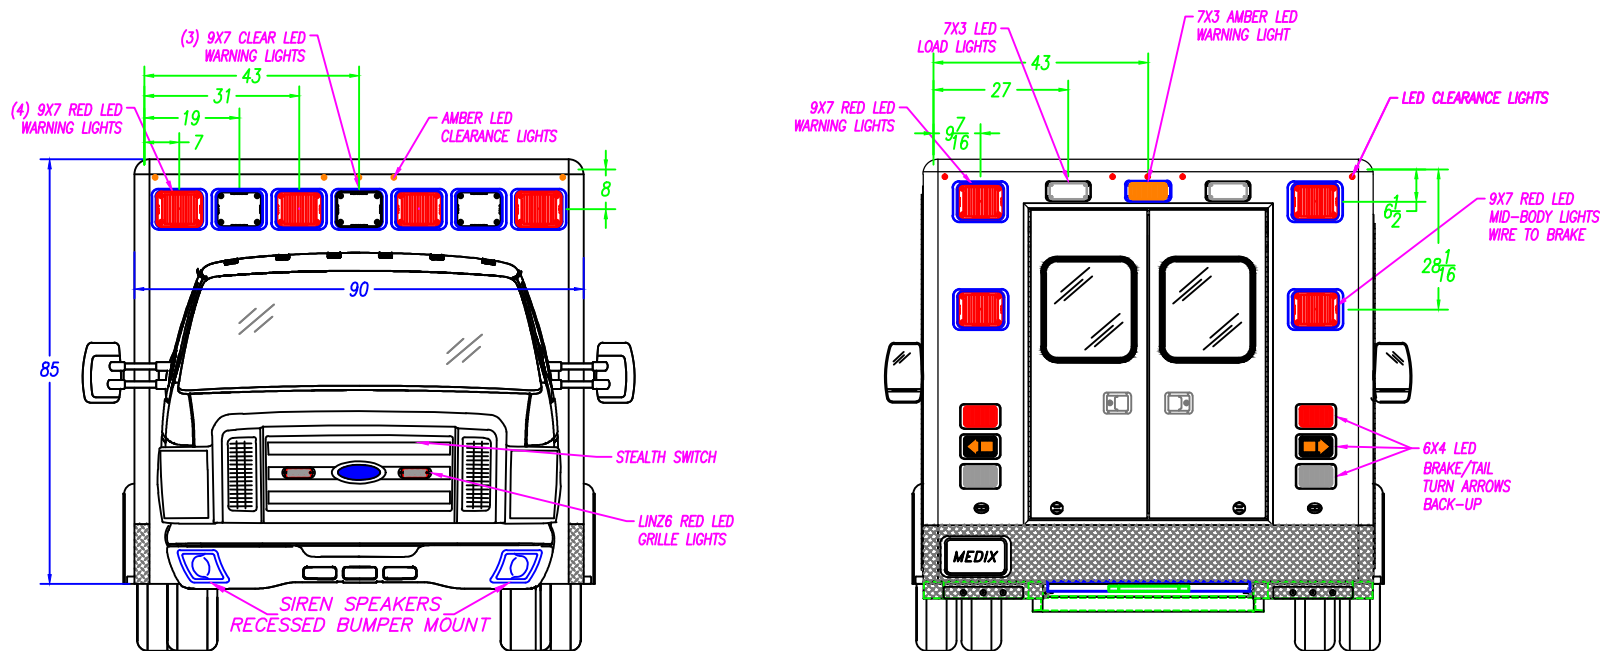

REAR ENTRY DOOR SIZES				FORD E-350 138" W.B. 146" RP90-ES TYPE III			 3008 MOBILE DRIVE ELKHART, IN 46514 PH: 574-266-0911 FAX: 574-266-6669 "LET US SHOW YOU THE MEDIX DIFFERENCE" WWW.MEDIXAMBULANCE.COM
NO.	WIDTH	HEIGHT	PART NUMBER	DESCRIPTION: FRONT & REAR EXTERIOR			
R1	23 ⁷ / ₁₆ "	61 ⁷ / ₁₆ "	-	DRAWN BY: J.ARTLEY	DATE CREATED: 11/23/16	SCALE: 5/16"=1'	
R2	24 ¹ / ₂ "	61 ⁷ / ₁₆ "	-	REVISED BY: D.EDWARDS	DATE REVISED: 3/23/17	REVISION: D	
				Note: Drawings are for reference only, measurements may vary from actual product.			

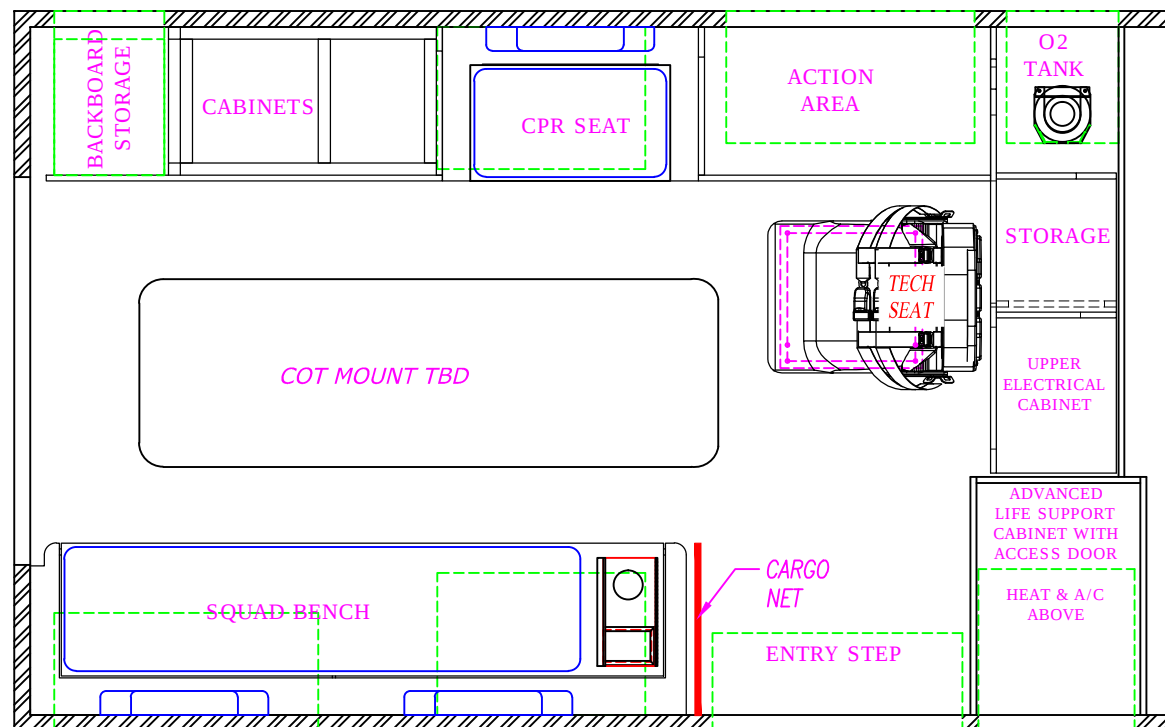

FORD E-350 138" W.B.
146" RP90-ES TYPE III

PATIENT AREA PLAN-CPR


DRAWN BY: J.ARTLEY	DATE CREATED: 11/23/16	SCALE: 1/2"=1'
REVISED BY: D.EDWARDS	DATE REVISED: 3/23/17	REVISION: D

Note: Drawings are for reference only, measurements may vary from actual product.




3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669




"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

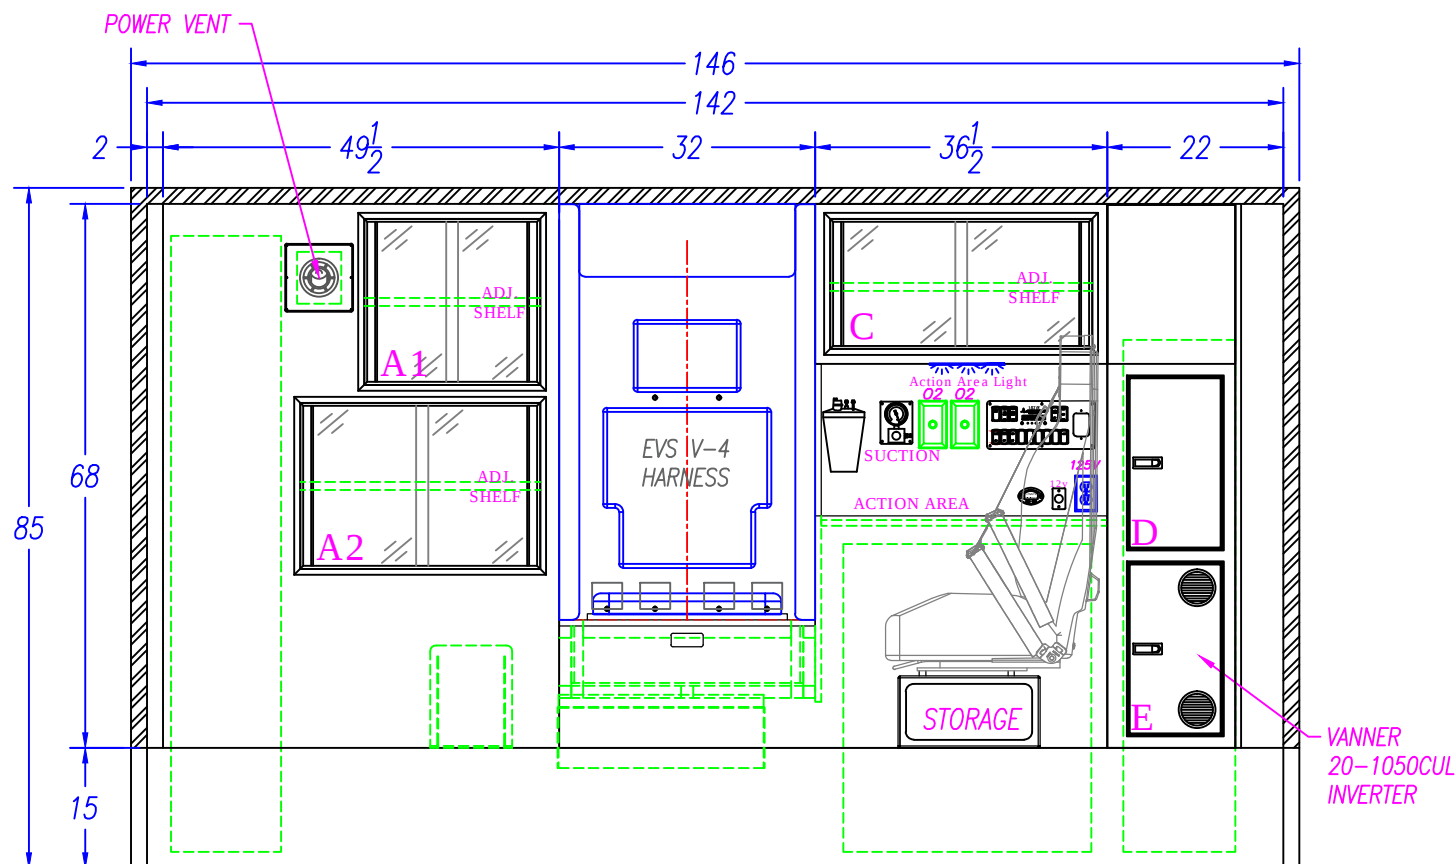

INTERIOR CABINET STORAGE					FORD E-350 138" W.B. 146" RP90-ES TYPE III			 3008 MOBILE DRIVE ELKHART, IN 46514 PH: 574-266-0911 FAX: 574-266-6669 "LET US SHOW YOU THE MEDIX DIFFERENCE" WWW.MEDIXAMBULANCE.COM
ITEM	HEIGHT	WIDTH	DEPTH	SPECIAL NOTE	DESCRIPTION: STREET SIDE INTERIOR-CPR			
A1	20 3/4"	22"	15"		DRAWN BY: J.ARTLEY			
A2	20 3/4"	30"	15"		DATE CREATED: 11/23/16			
C	16 1/4"	32 3/4"	15"		SCALE: 1/2"=1'			
D	21 1/4"	12"	16 1/4"		DATE REVISED: 3/23/17			
E	21 1/4"	12"	16 1/4"		REVISION: D			
					Note: Drawings are for reference only, measurements may vary from actual product.			

Dealer: MEDIX	Approved By:	Date:	Customer: NORTHWEST AMBULANCE	16-90183	Sheet F
----------------------	---------------------	--------------	--------------------------------------	----------	-------------------

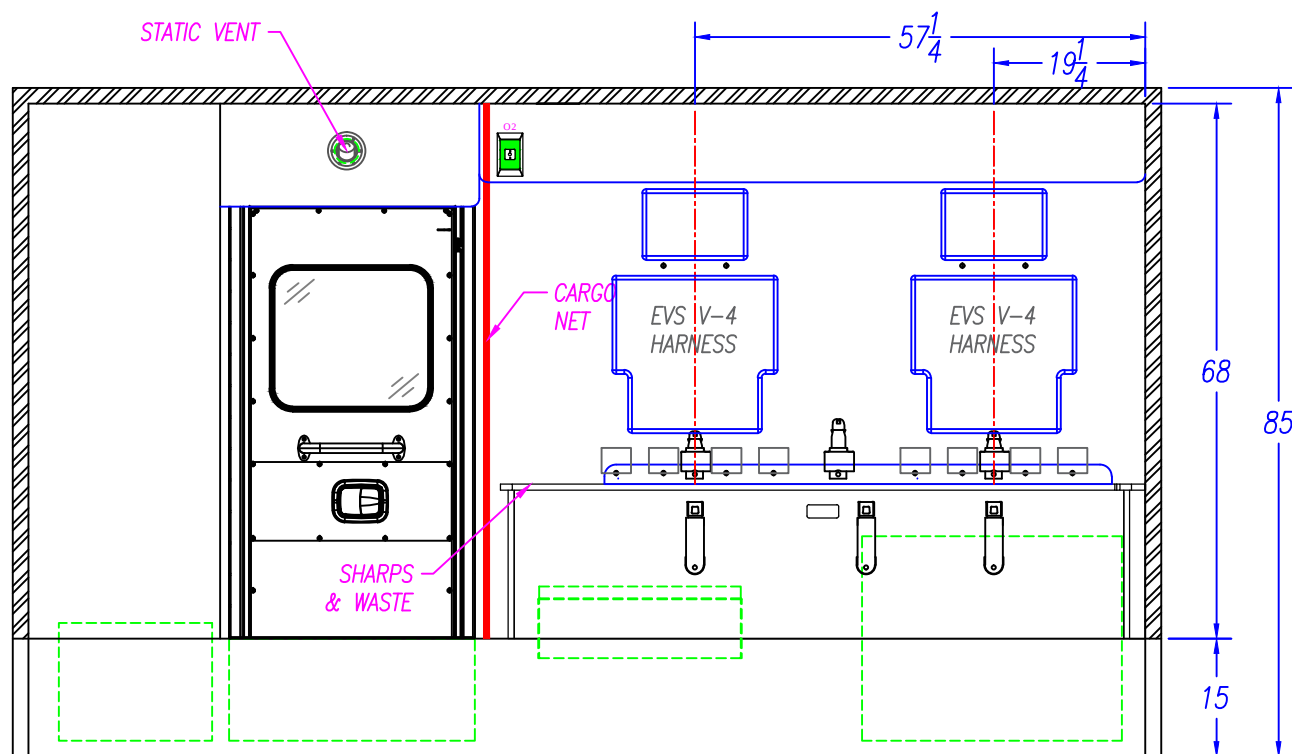


4" SEATBELT PLATE LOCATION	WELD SHOP		30	INCHES	NOTE: THIS DIMENSION IS FROM THE BOTTOM OF THE WALL TO THE BOTTOM OF THE 4" PLATE.								
	CABINET SHOP		NOTE: THE HOLES FOR THE TOP SEATBELT BOLTS ARE 1 1/2" FROM THE TOP OF THE SQUAD BENCH TO THE CENTER OF THE SEATBELT BOLT. NOTE: THE HOLES FOR THE BOTTOM SEATBELT BOLTS ON THE SQUAD BENCH ARE 9 3/4" FROM THE TOP OF THE FLOOR TO THE CENTER OF THE BOLT.										
	NOTE: READ THE DIMENSIONS FROM RIGHT TO LEFT AS VIEWED	THE LOCATION OF THE BOTTOM SEATBELT HOLES ARE FROM THE REAR OF THE SQUAD BENCH TO THE CENTER OF THE 1/2" HOLE			BOTTOM			57 1/4"	35 1/2"	19 1/4"			
		THE LOCATION OF THE TOP SEATBELT HOLES ARE FROM THE REAR WALL TO THE CENTER OF THE 1/2" HOLE			TOP			57 1/4"	39"	19 1/4"			
INTERIOR CABINET STORAGE					FORD E-350 138" W.B. 146" RP90-ES TYPE III					 3008 MOBILE DRIVE ELKHART, IN 46514 PH: 574-266-0911 FAX: 574-266-6669 "LET US SHOW YOU THE MEDIX DIFFERENCE" WWW.MEDIXAMBULANCE.COM			
ITEM	HEIGHT	WIDTH	DEPTH	SPECIAL NOTE	DESCRIPTION:								
A					CURB SIDE INTERIOR								
B					DRAWN BY: J.ARTLEY		DATE CREATED: 11/23/16		SCALE: 1/2"=1'				
C					REVISED BY: D.EDWARDS		DATE REVISED: 3/23/17		REVISION: D				
D					Note: Drawings are for reference only, measurements may vary from actual product.								
E													
F													



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

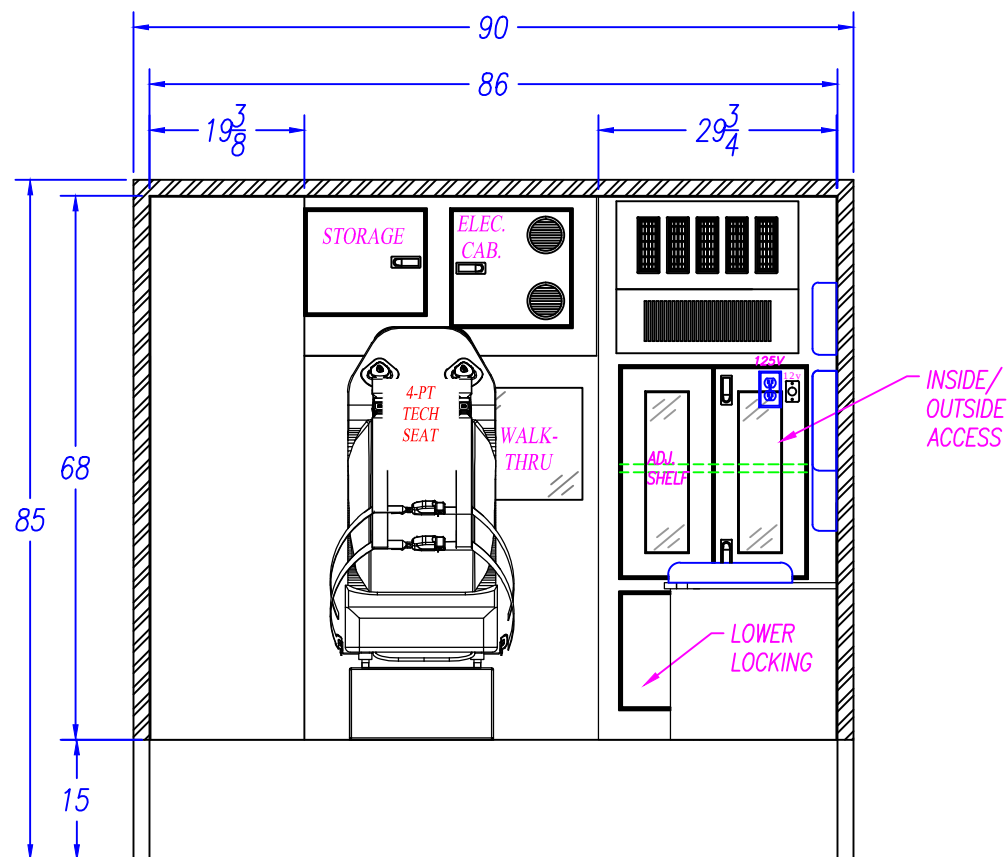

INTERIOR CABINET STORAGE					FORD E-350 138" W.B. 146" RP90-ES TYPE III		
ITEM	HEIGHT	WIDTH	DEPTH	SPECIAL NOTE	FRONT ELEVATION		
ALS-1	14 3/4"	23 1/2"	20 1/2"		DESCRIPTION:		
ALS-2	26 1/8"	23 1/2"	20 1/2"		DRAWN BY: J.ARTLEY		
					DATE CREATED: 11/23/16		
					SCALE: 1/2"=1'		
					REVISED BY: D.EDWARDS		
					DATE REVISED: 3/23/17		
					REVISION: D		
					Note: Drawings are for reference only, measurements may vary from actual product.		

3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"

WWW.MEDIXAMBULANCE.COM

Dealer: MEDIX

Approved By:


Date:

Customer: NORTHWEST AMBULANCE

16-90183

Sheet

H

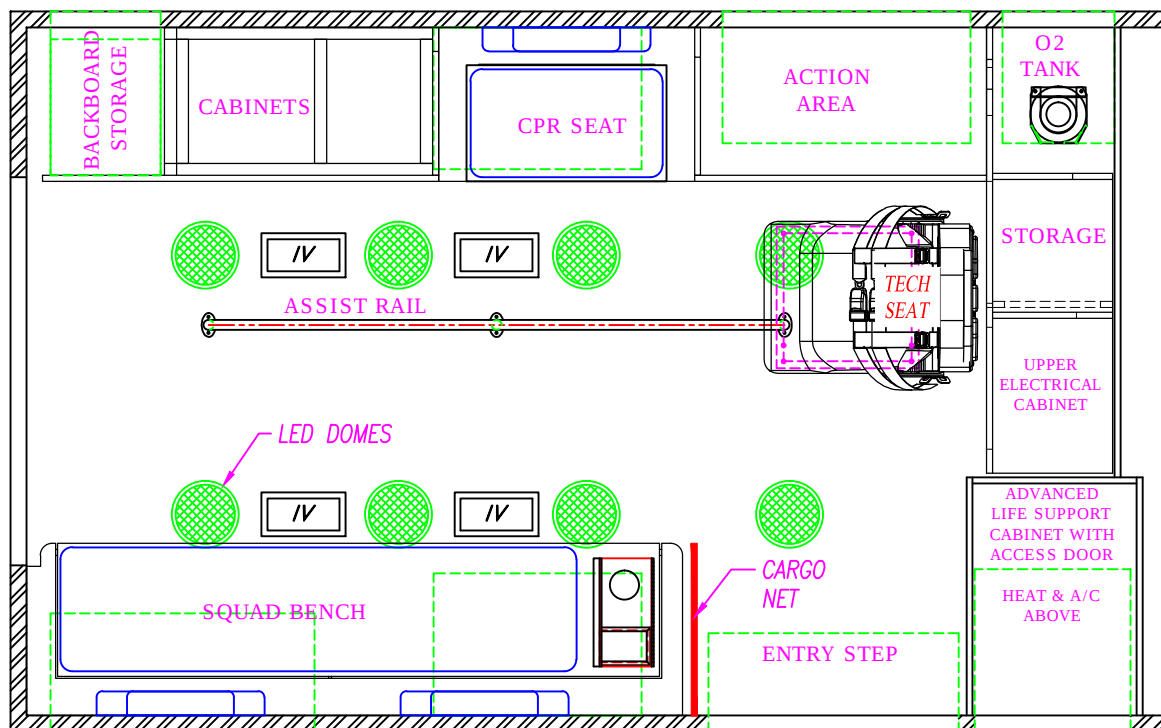

FORD E-350 138" W.B.
146" RP90-ES TYPE III

DESCRIPTION:

CEILING LAYOUT-CPR

DRAWN BY:
J.ARTLEY

DATE CREATED:
11/23/16

SCALE:
1/2"=1'

REVISED BY:
D.EDWARDS

DATE REVISED:
3/23/17


REVISION:
D

Note: Drawings are for reference only, measurements may vary from actual product.



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

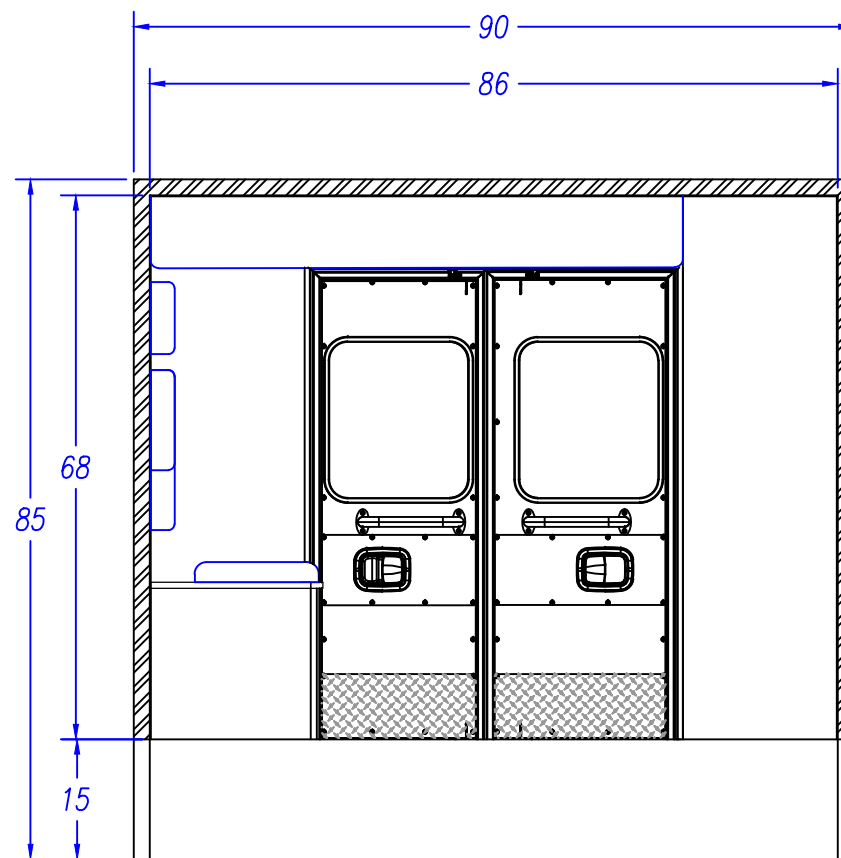

FORD E-350 138" W.B.
146" RP90-ES TYPE III

DESCRIPTION:

REAR ELEVATION

DRAWN BY:
J. ARTLEY

DATE CREATED:
11/23/16

SCALE:
1/2"=1'

REVISED BY:
D. EDWARDS

DATE REVISED:
3/23/17

REVISION:
D

Note: Drawings are for reference only, measurements may vary from actual product.



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM