


ALL WARNING, SCENE, AND TAIL LIGHTS TO HAVE CHROME BEZELS.
 ALL COMPARTMENT/ENTRY DOORS TO HAVE POWER LOCKS
 WIRE TO OEM

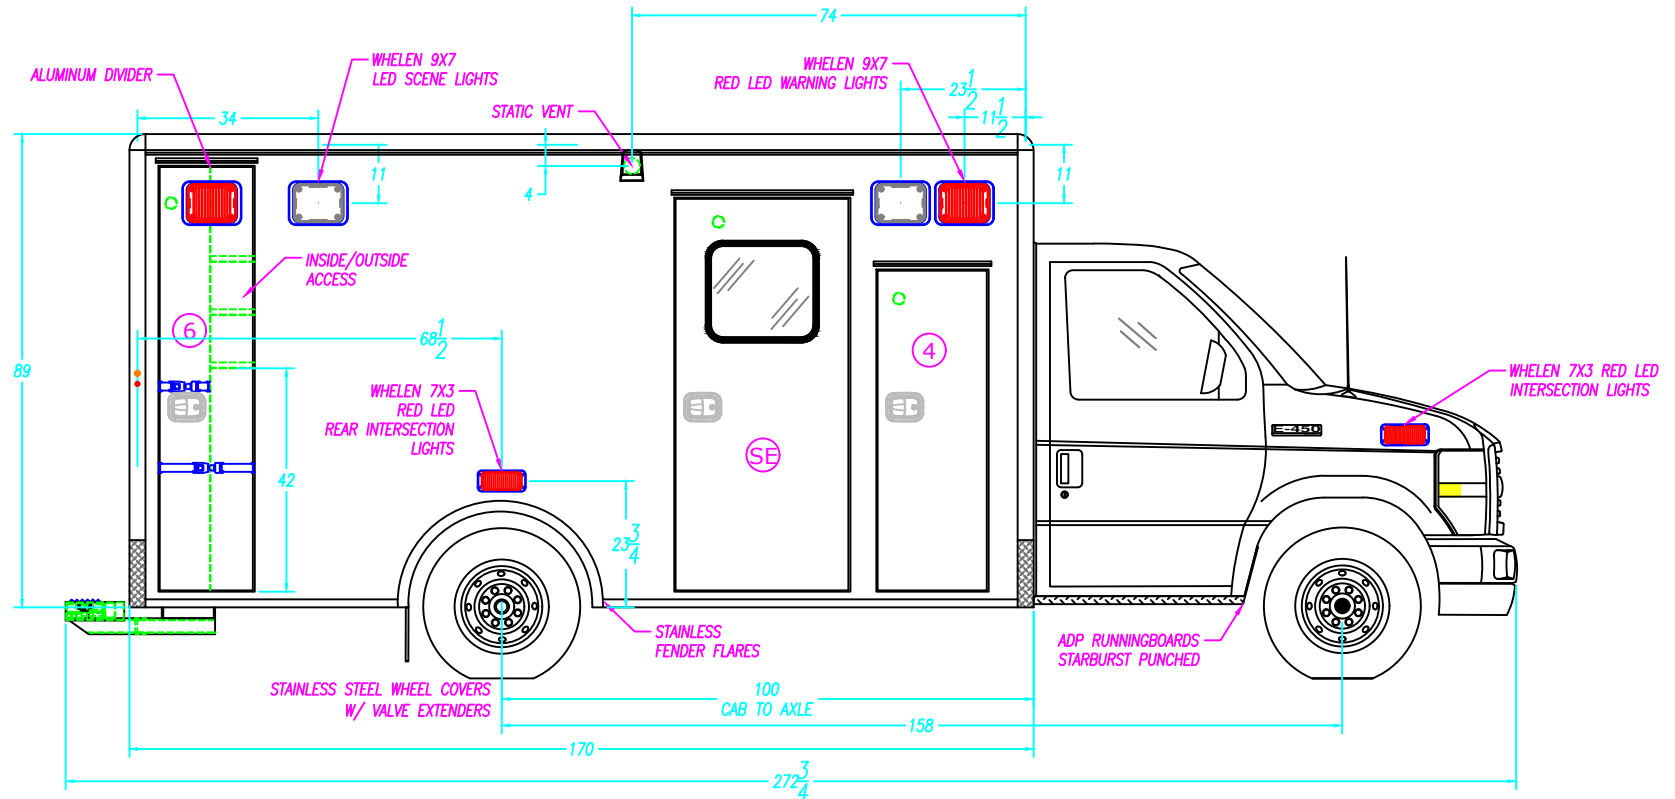

COMPARTMENT SIZES

NOTE: THE DIMENSIONS BELOW ARE INSIDE TUB DIMENSIONS

NO.	COMPARTMENT TYPE	WIDTH	HEIGHT	DEPTH
4	ALS COMPARTMENT	---	---	---
5	BATTERY COMPARTMENT	20 1/2"	14 1/2"	23 7/8"
6	BACK BOARD COMPARTMENT	20"	79 1/2"	22"

COMPARTMENT / ENTRY DOOR SIZES

NO.	COMPARTMENT / ENTRY DOOR TYPE	WIDTH	HEIGHT
4	ALS DOOR	20 1/2"	60 1/8"
5	BATTERY STORAGE DOOR	---	---
SE	SIDE ENTRY DOOR	32 1/2"	73 3/8"
6	BACK BOARD STORAGE DOOR	17 1/2"	79 3/8"

COMPARTMENT & ENTRY DOORS

NO.	PART NUMBER	NO.	PART NUMBER
4	33-A10783	6	33-A10784
SE	78-116133	-	---

M2 170" TYPE III FORD E-450 158" WHEELBASE		
DESCRIPTION: CURB SIDE EXTERIOR		
DRAWN BY: I. STANSBURY	DATE CREATED: 1/18/2023	SCALE: 5/16"=1'
REVISED BY: I. STANSBURY	DATE REVISED: 2/20/2023	REVISION: B
Note: Drawings are for reference only, measurements may vary from actual product.		


COMPARTMENT TUBS

NO.	PART NUMBER	NO.	PART NUMBER
5	33-100692	-	---
6	33-103025	-	---

3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

ALL WARNING, SCENE, AND TAIL LIGHTS TO HAVE CHROME BEZELS.
ALL COMPARTMENT/ENTRY DOORS TO HAVE POWER LOCKS
WIRE TO OEM

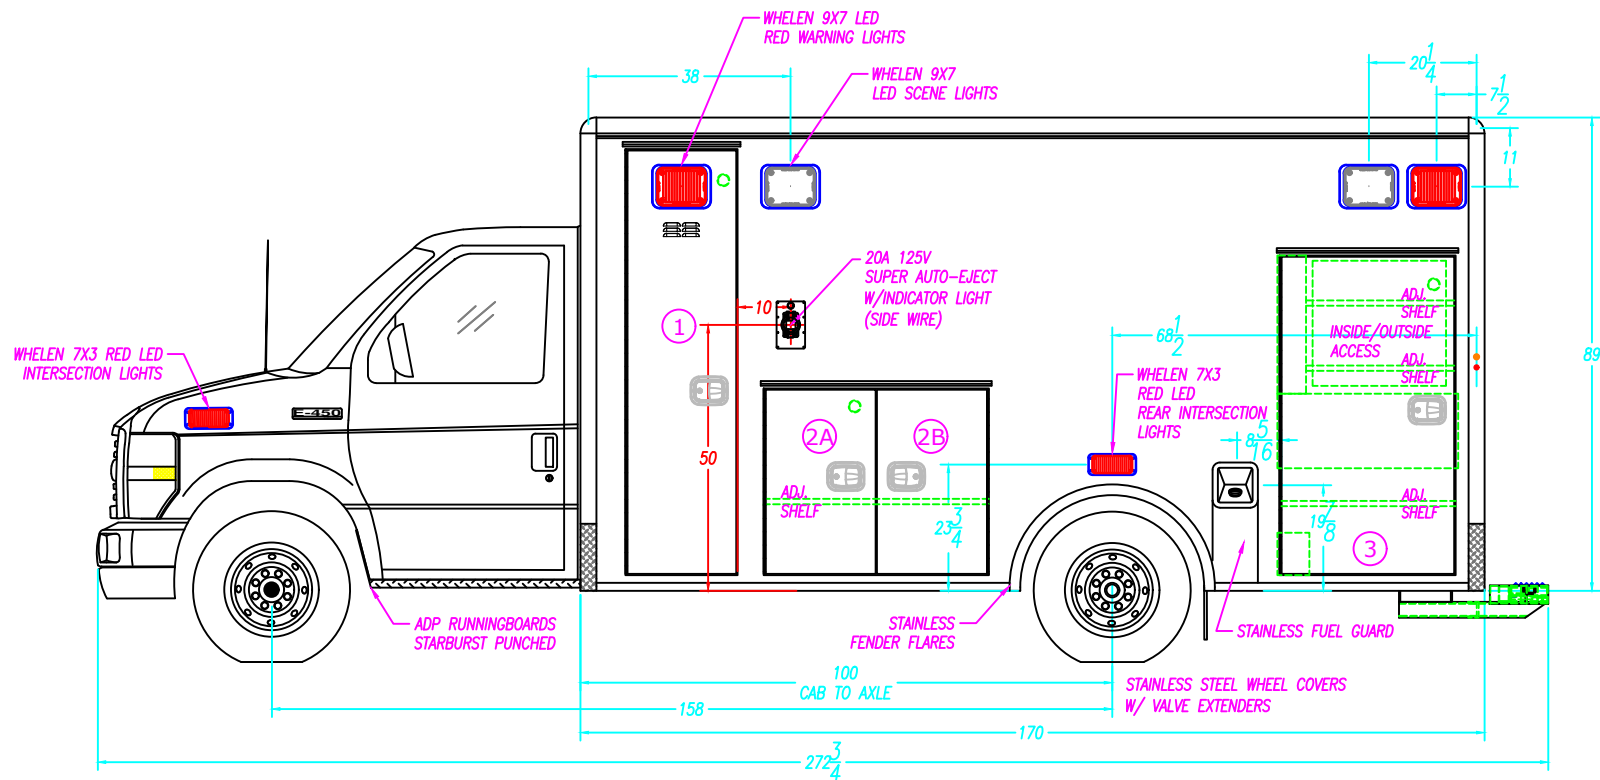

COMPARTMENT SIZES

NO.	COMPARTMENT TYPE	WIDTH	HEIGHT	DEPTH
1	O2 COMPARTMENT	20 1/2"	79 1/2"	18 1/2"
2	MID STORAGE COMPARTMENT	41 3/4"	34 1/2"	18 1/2"
3	REAR STORAGE COMPARTMENT	34"	59 1/2"	19 1/2"
---	---	---	---	---

NOTE: THE DIMENSIONS BELOW ARE INSIDE TUB
DIMENSIONS

COMPARTMENT / ENTRY DOOR SIZES

NO.	COMPARTMENT / ENTRY DOOR TYPE	WIDTH	HEIGHT
1	O2 STORAGE DOOR	20 1/2"	79 3/16"
2A	MID STORAGE DOOR-A	20 1 1/16"	34 3/16"
2B	MID STORAGE DOOR-B	20 1 1/16"	34 3/16"
3	REAR STORAGE DOOR	32 1/2"	59 3/4"

COMPARTMENT & ENTRY DOORS

NO.	PART NUMBER	NO.	PARTNUMBER
1	33-A10780	3	33-A10782
2	33-A10781	-	---
		-	---

M2 170" TYPE III
FORD E-450 158" WHEELBASE

DESCRIPTION:

DRAWN BY:

DATE CREATED:

SCALE:

REVISED BY:	I. STANSBURY
-------------	--------------

1/18/2023
DATE REVISED:

5/16"=1
REVISION:

Note: Drawings are for reference only, measurements may vary from actual product.

COMPARTMENT TUBS


NO.	PART NUMBER	NO.	PARTNUMBER
1	33-100689	-	---
2	33-103079	-	---
3	33-104310	-	---



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

ALL WARNING, SCENE, AND TAIL LIGHTS TO HAVE CHROME BEZELS.
ALL COMPARTMENT/ENTRY DOORS TO HAVE POWER LOCKS
WIRE TO OEM

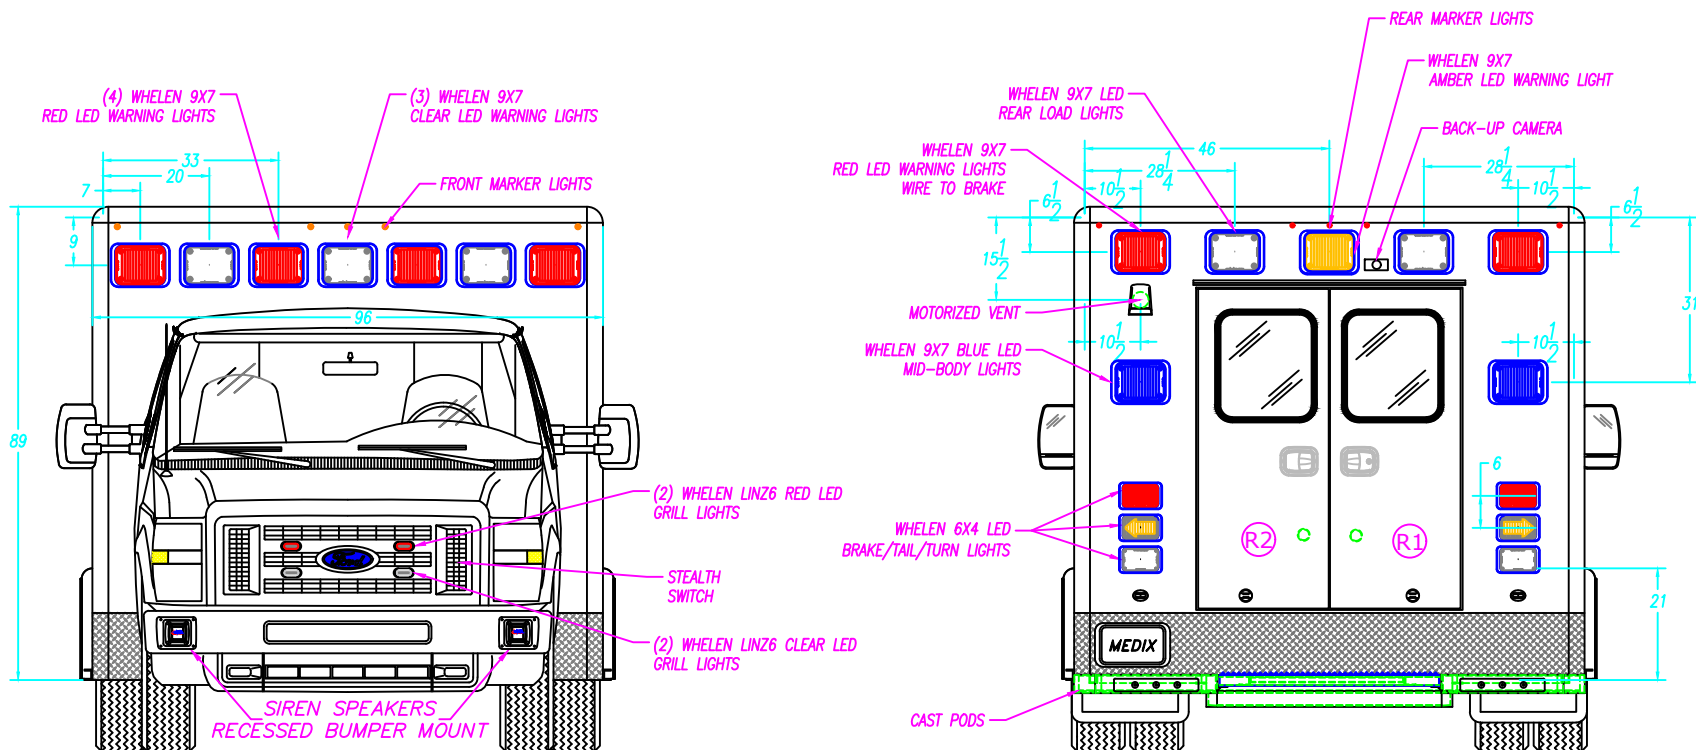

REAR ENTRY DOOR SIZES				M2 170" TYPE III FORD E-450 158" WHEELBASE			 3008 MOBILE DRIVE ELKHART, IN 46514 PH: 574-266-0911 FAX: 574-266-6669 "LET US SHOW YOU THE MEDIX DIFFERENCE" WWW.MEDIXAMBULANCE.COM
NO.	WIDTH	HEIGHT	PART NUMBER	DESCRIPTION: FRONT & REAR EXTERIOR			
RE	54"	64 ½"	78-116135	DRAWN BY: I.STANSBURY	DATE CREATED: 1/18/2023	SCALE: 5/16"=1'	
				REVISED BY: I.STANSBURY	DATE REVISED: 2/20/2023	REVISION: B	
				Note: Drawings are for reference only, measurements may vary from actual product.			

Dealer: GORMAN

Approved By:

Date:


Customer:

DEMO

22-M403

Sheet

D

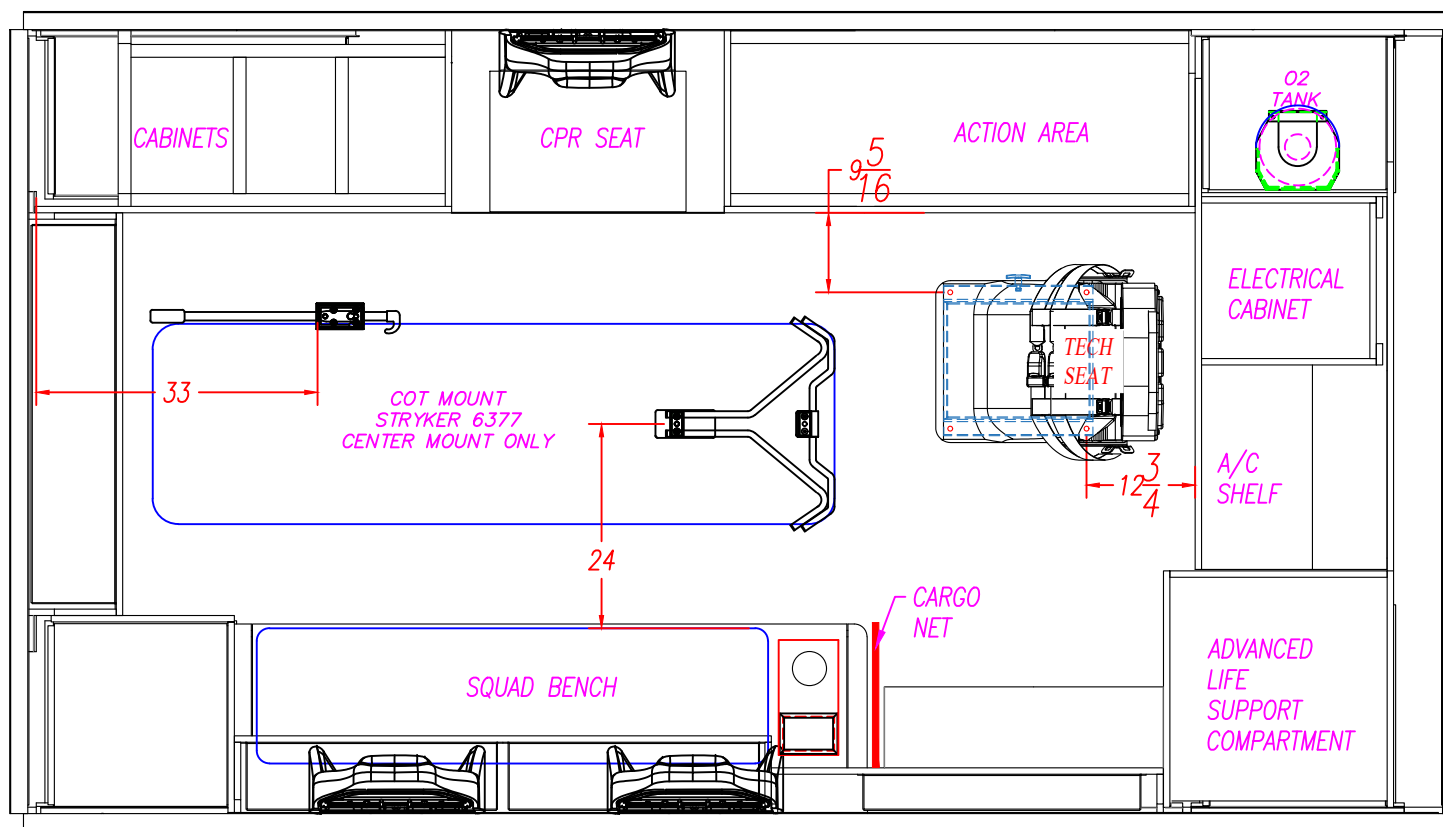

M2 170" TYPE III
FORD E-450 158" WHEELBASE

DESCRIPTION:

PATIENT AREA PLAN

DRAWN BY:

I. STANSBURY

DATE CREATED:

1/18/2023

SCALE:

1/2"=1'

REVISED BY:

I. STANSBURY

DATE REVISED:

2/20/2023

REVISION:

B

Note: Drawings are for reference only, measurements may vary from actual product.



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

Technical drawing of the interior of a mobile medical unit, showing equipment layout and dimensions. The drawing is divided into two main sections by a central aisle.

Left Section:

- Top:** A cabinet with two doors, labeled "CABINET LIGHTS" and "RESTOCKING". Dimensions: 170 (total width), 166 (inner width), 54 ⁷/₈ (left door width), 32 (gap between doors).
- Below Cabinet:** A "MOUNTING PLATE" with "INSIDE/OUTSIDE ACCESS" (22" height). Below it, a "TILT OUT SHARPS/WASTE" container (21 ⁷/₈" height). A "12V 125V" outlet is also shown.
- Right Side (Left Section):** A "STAINLESS TRIM" panel.

Right Section:


- Top:** A cabinet with two doors, labeled "CABINET LIGHTS" and "RESTOCKING". Dimensions: 48 ³/₄ (left door width), 23 ¹/₄ (gap between doors), 3 ³/₄ (right door width).
- Below Cabinet:** A "B" unit (21 ⁷/₈" height) containing an "Action Area Light", "02 02 ELEC 02" components, and a "12V 125V" outlet. Below it, a "29" unit (29" height) containing a "D" unit and an "E" unit.
- Right Side (Right Section):** A "D" unit and an "E" unit, both labeled "D" and "E" respectively.





Dimensions:

- Overall width: 170 (left section) + 48 ³/₄ + 23 ¹/₄ + 3 ³/₄ = 248 ¹/₄.
- Overall height: 89 (left section) + 15 (right section) = 104.

ITEM	HEIGHT	WIDTH	DEPTH	PART #'S
A	17 3/8"	40 3/8"	17 3/8"	
B	16 3/4"	45 3/4"	16 3/4"	
D	22 1/4"	19 1/2"	17 1/4"	-
E	22 1/4"	19 1/2"	17 1/4"	-
F				-

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

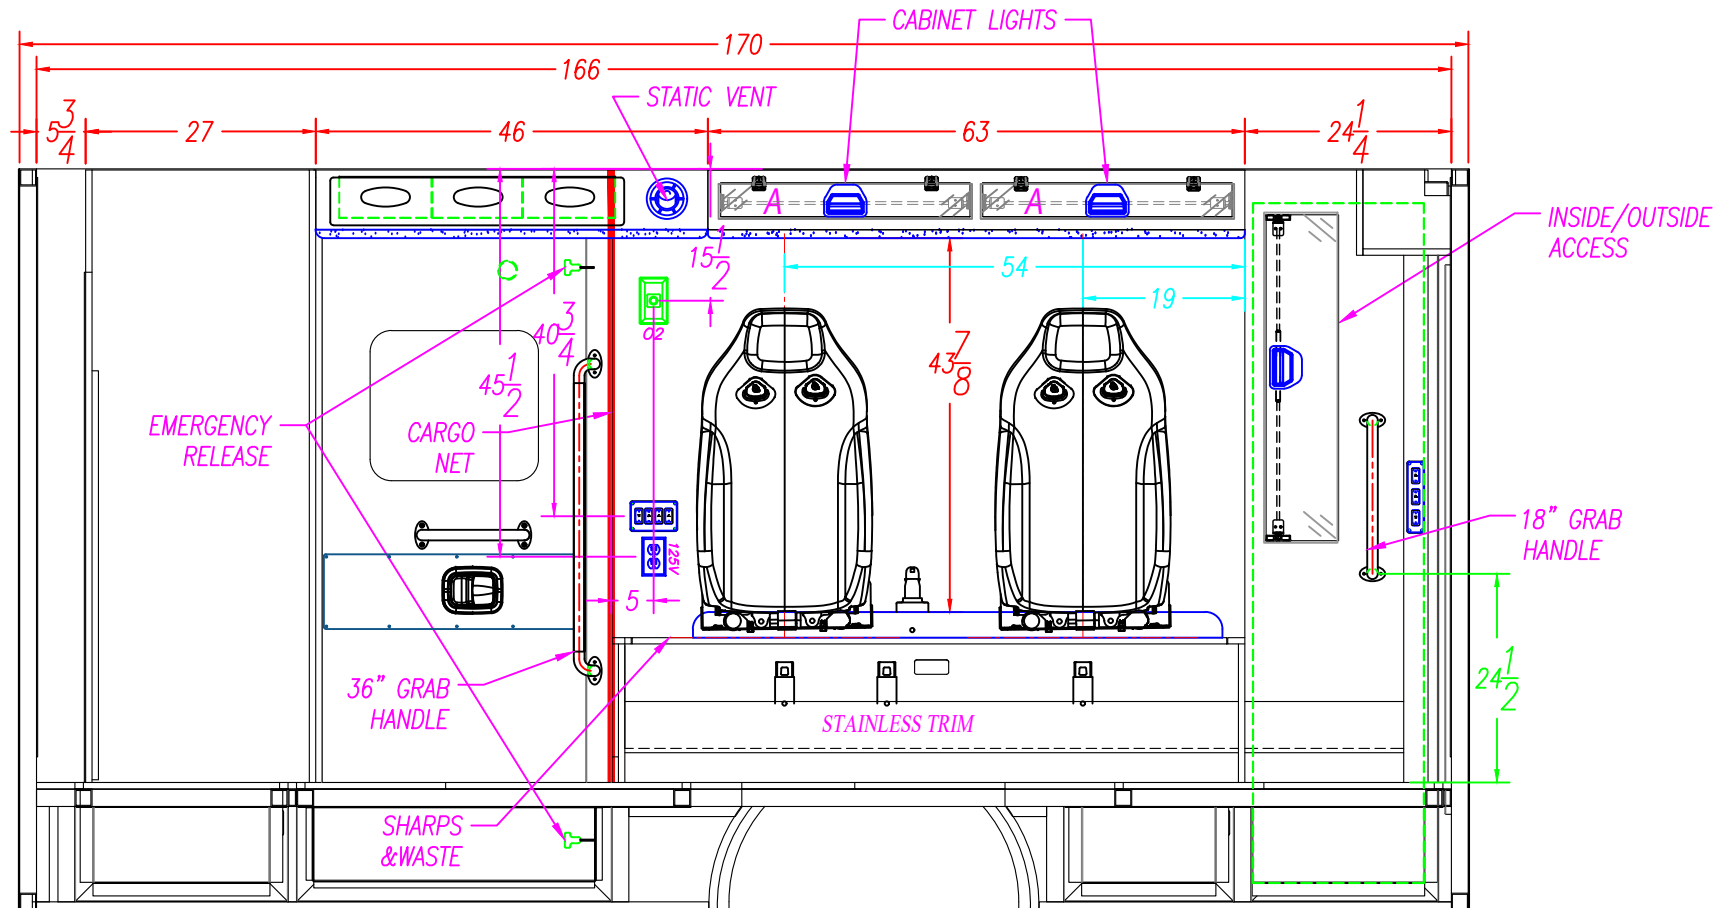

4" SEATBELT PLATE LOCATION				WELD SHOP	33	INCHES	NOTE: THIS DIMENSION IS FROM THE BOTTOM OF THE WALL TO THE BOTTOM OF THE 4" PLATE.						
				CABINET SHOP	NOTE: THE HOLES FOR THE TOP SEATBELT BOLTS ARE 1 ¼" FROM THE TOP OF THE SQUAD BENCH TO THE CENTER OF THE SEATBELT BOLT. NOTE: THE HOLES FOR THE BOTTOM SEATBELT BOLTS ON THE SQUAD BENCH ARE 9 ¾" FROM THE TOP OF THE FLOOR TO THE CENTER OF THE BOLT.								
				NOTE: READ THE DIMENSIONS FROM RIGHT TO LEFT AS VIEWED		THE LOCATION OF THE BOTTOM SEATBELT HOLES ARE FROM THE REAR OF THE SQUAD BENCH TO THE CENTER OF THE ½" HOLE		BOTTOM					54"
		THE LOCATION OF THE TOP SEATBELT HOLES ARE FROM THE REAR WALL TO THE CENTER OF THE ½" HOLE		TOP					54"	39"	19"		
INTERIOR CABINET STORAGE					M2 170" TYPE III FORD E-450 158" WHEELBASE					 3008 MOBILE DRIVE ELKHART, IN 46514 PH: 574-266-0911 FAX: 574-266-6669 "LET US SHOW YOU THE MEDIX DIFFERENCE" WWW.MEDIXAMBULANCE.COM			
ITEM	HEIGHT	WIDTH	DEPTH	SPECIAL NOTE	DESCRIPTION: CURB SIDE INTERIOR								
A	4"	29 ¼"	7"		DRAWN BY: I.STANSBURY		DATE CREATED: 1/18/2023		SCALE: 1/2"=1'				
B					REVISED BY: I.STANSBURY		DATE REVISED: 2/20/2023		REVISION: B				
C					Note: Drawings are for reference only, measurements may vary from actual product.								
D													
E													
F													

Dealer: GORMAN

Approved By:


Date:

Customer:

DEMO

22-M403

Sheet
G

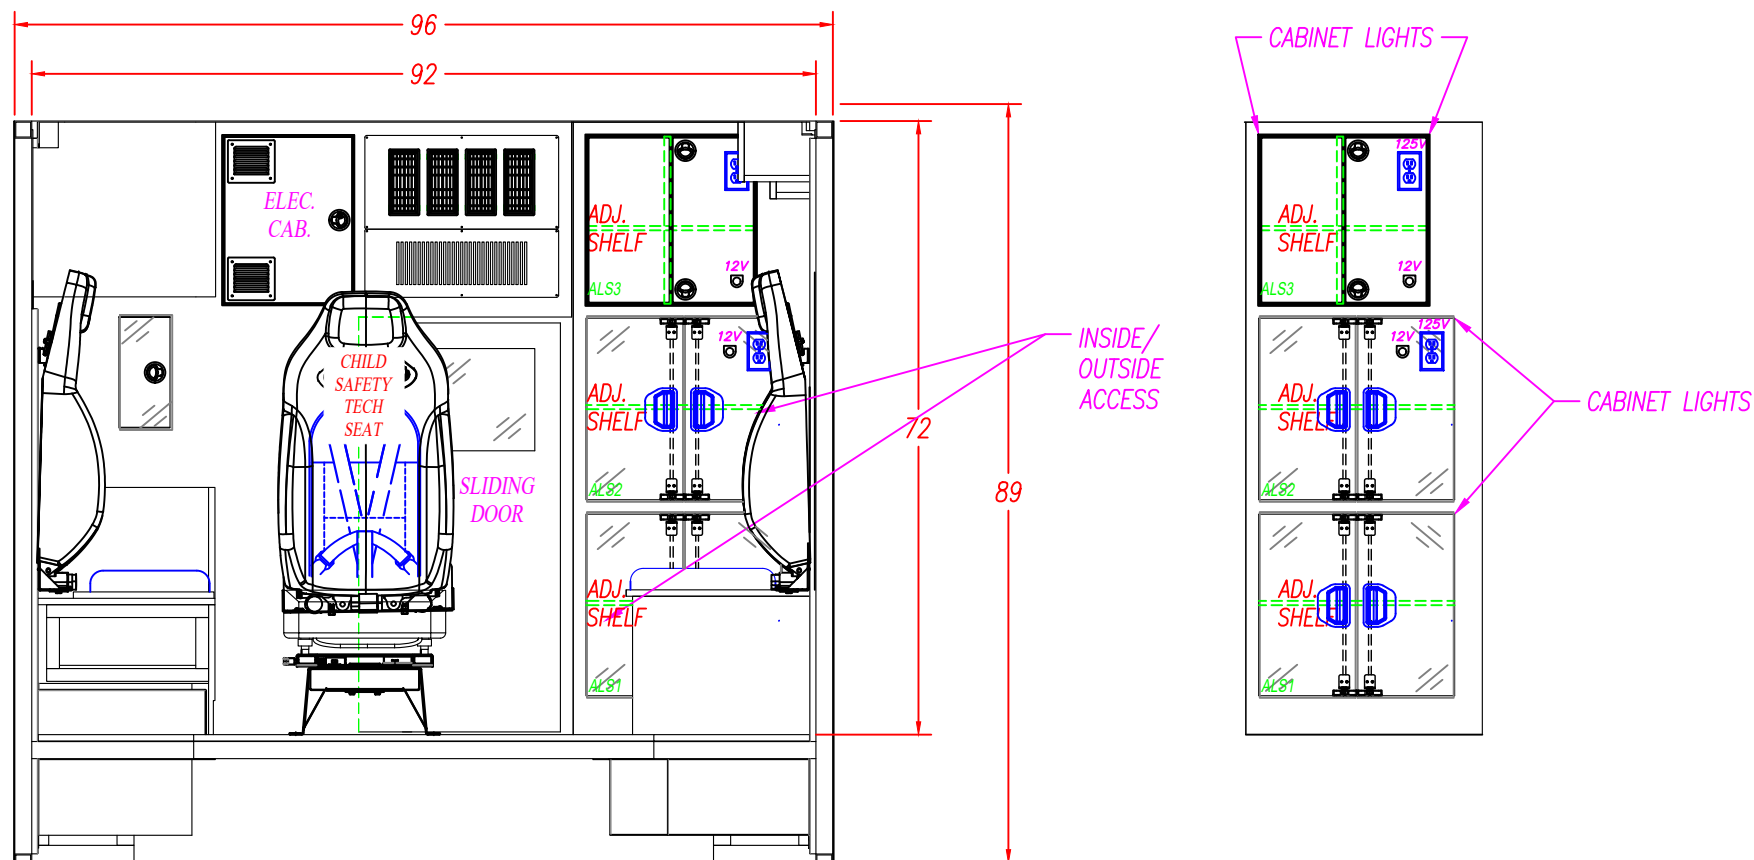

INTERIOR CABINET STORAGE

ITEM	HEIGHT	WIDTH	DEPTH	SPECIAL NOTE
ALS1	21 5/16"	23"	25 1/4"	
ALS2	21 5/16"	23"	25 1/4"	
ALS3	20"	20"	25 1/4"	

M2 170" TYPE III FORD E-450 158" WHEELBASE		
DESCRIPTION: FRONT ELEVATION		
DRAWN BY: I. STANSBURY	DATE CREATED: 1/18/2023	SCALE: 1/2"=1'
REVISED BY: I. STANSBURY	DATE REVISED: 2/20/2023	REVISION: B
Note: Drawings are for reference only, measurements may vary from actual product.		

MEDIX 3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

SPECIALTY VEHICLES, INC.

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

Dealer: GORMAN

Approved By:


Date:

Customer:

DEMO

22-M403

Sheet
H

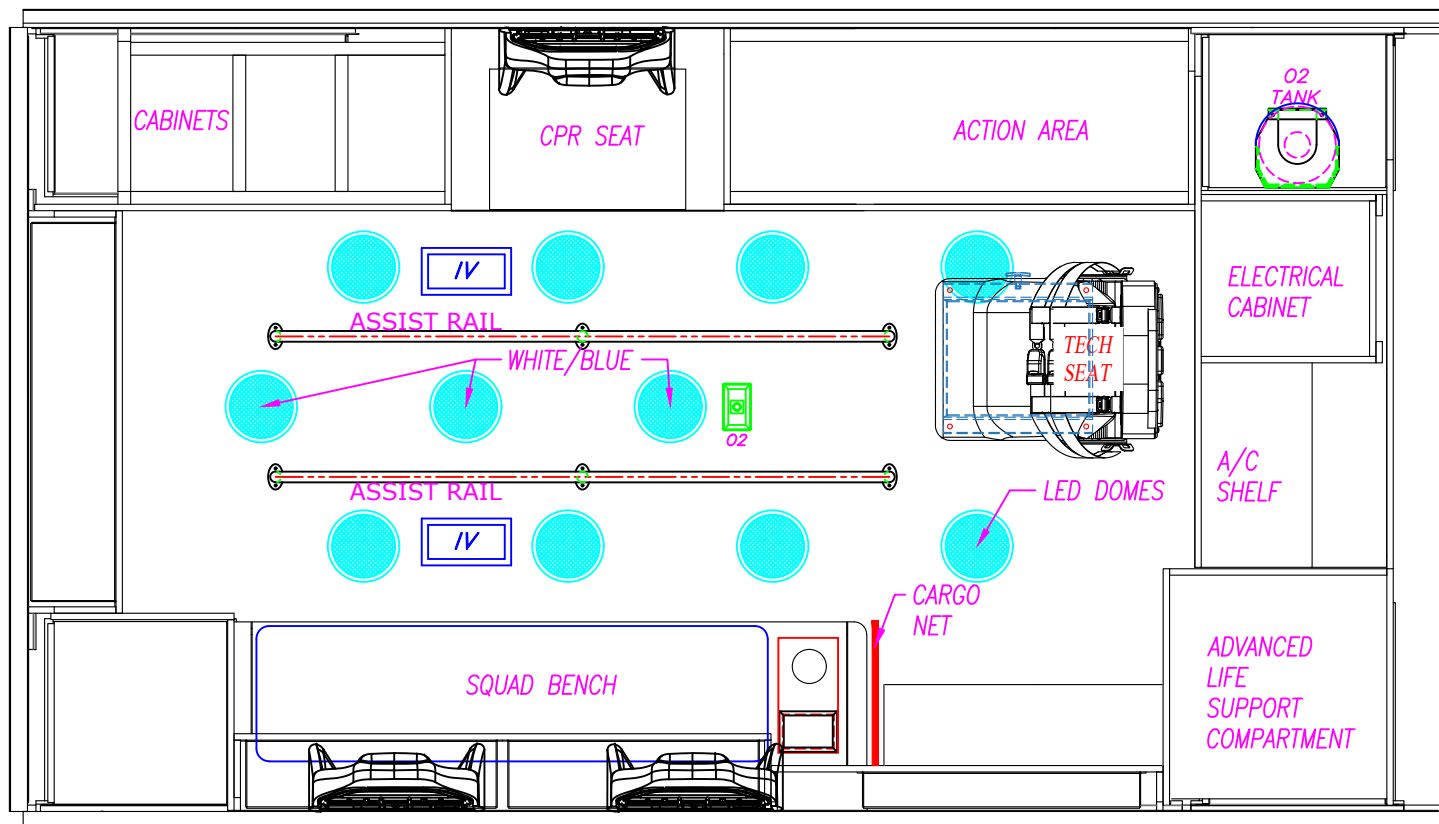

M2 170" TYPE III
FORD E-450 158" WHEELBASE

DESCRIPTION:

CEILING LAYOUT

DRAWN BY:

I. STANSBURY

DATE CREATED:

1/18/2023

SCALE:

1/2"=1'

REVISED BY:

I. STANSBURY

DATE REVISED:

2/20/2023

REVISION:

B

Note: Drawings are for reference only, measurements may vary from actual product.



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

Dealer: GORMAN

Approved By:


Date:

Customer:

DEMO

22-M403

Sheet

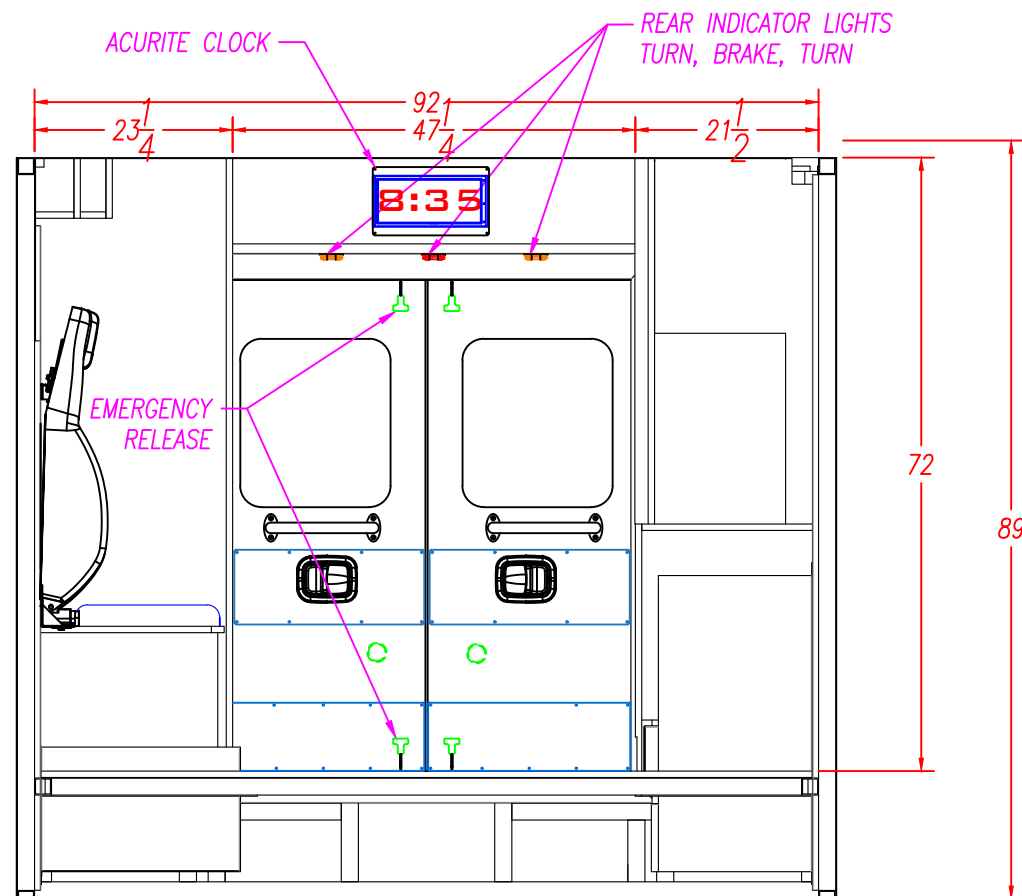

M2 170" TYPE III
FORD E-450 158" WHEELBASE

DESCRIPTION:

REAR ELEVATION

DRAWN BY:
I.STANSBURY

DATE CREATED:
1/18/2023

SCALE:
1/2"=1'

REVISED BY:
I.STANSBURY

DATE REVISED:
2/20/2023

REVISION:
B

Note: Drawings are for reference only, measurements may vary from actual product.



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM

Dealer: GORMAN

Approved By:

Date:




Customer:

DEMO

22-M403

Sheet

J

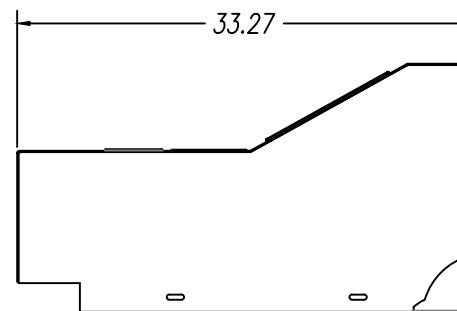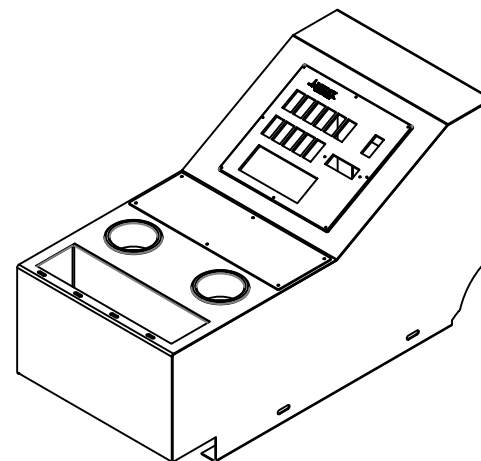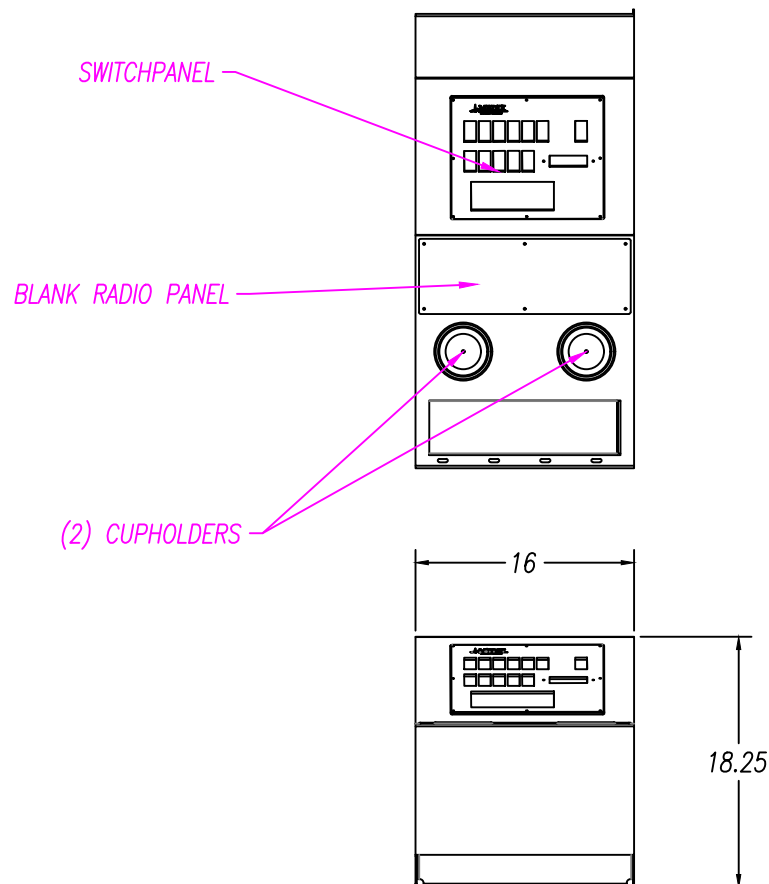

M2 170" TYPE III
FORD E-450 158" WHEELBASE

DESCRIPTION:

FRONT CONSOLE

DRAWN BY:

I.STANSBURY

DATE CREATED:

1/18/2023

SCALE:

1/2"=1'

REVISED BY:

I.STANSBURY

DATE REVISED:

2/20/2023

REVISION:

B

Note: Drawings are for reference only, measurements may vary from actual product.



3008 MOBILE DRIVE
ELKHART, IN 46514
PH: 574-266-0911
FAX: 574-266-6669

"LET US SHOW YOU THE MEDIX DIFFERENCE"
WWW.MEDIXAMBULANCE.COM